



To Ensure Safe Use




 

 
- ★ Age limitation: Anyone at age 15 or over
Never allow children under 15 to use this machine.

Improper handling or operation of this machine may result in injury or damage to property. Points which must be observed to prevent such injury or damage are described as follows.

About WARNING and CAUTION Notices


 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. Note: Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. The symbol at left means "danger of electrocution."
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. The symbol at left means the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. The symbol at left means the power-cord plug must be unplugged from the outlet.


 Incorrect operation may cause injury.

WARNING


 Be sure to follow the operation procedures described in this documentation. Never allow anyone unfamiliar with the usage or handling of the machine to touch it. Incorrect usage or handling may lead to an accident.

 Keep children away from the machine. Never operate this machine within children's reach.


The machine includes areas and components that pose a hazard to children and may result in injury, blindness, choking, or other serious accident.

 Never operate the machine while tired or after ingesting alcohol or any medication.


Operation requires unimpaired judgment. Impaired judgment may result in an accident.

 Never use the machine for any purpose for which it is not intended, or use the machine in an undue manner that exceeds its capacity.


Doing so may result in injury or fire.

 For accessories (optional and consumable items, power cord, and the like), use only genuine articles compatible with this machine.


Incompatible items may lead to an accident.

 Before attempting cleaning, maintenance, or attachment or detachment of optional items, disconnect the power cord.

Attempting such operations while the machine is connected to a power source may result in injury or electrical shock.

 Never use a cutting tool that has become dull. Perform frequent maintenance to keep and use the machine in good working order.

Unreasonable usage may result in fire or injury.

 Never attempt to disassemble, repair, or modify the the AC adapter.


Doing so may result in fire, electrical shock, or injury. Entrust repairs to a trained service technician.


CAUTION


 Exercise caution to avoid being pinched or becoming caught.


Inadvertent contact with certain areas may cause the hand or fingers to be pinched or become caught. Use care when performing operations.


CAUTION

 Never attempt operation while wearing a necktie, necklace, or loose clothing. Bind long hair securely. Such items may become caught in the machine, resulting in injury.

 Conduct operations in a clean, brightly lit location. Working in a location that is dark or cluttered may lead to an accident, such as becoming caught in the machine as the result of an inadvertent stumble.


 Close all covers during cutting. Cutting while opening a cover may lead to an accident, such as a tool breaking loose when inadvertently a cutting tool breaks.


 Never operate if a front cover is cracked or broken. Doing so may result in injury. If the frontcover is cracked, contact your authorized Roland DG Corp. dealer.


 Never climb or lean on the machine. The machine is not made to support a person. Climbing or leaning on the machine may dislodge components and cause a slip or fall, resulting in injury.

 Danger of electrical short, shock, electrocution, or fire


WARNING


 Connect to an electrical outlet that complies with this machine's ratings (for voltage, frequency, and current). Incorrect voltage or insufficient current may cause fire or electrical shock.


 Never use out of doors or in any location where exposure to water or high humidity may occur. Never touch with wet hands. Doing so may result in fire or electrical shock.


 Never allow any foreign object to get inside. Never expose to liquid spills. Inserting objects such as coins or matches or allowing beverages to be spilled into the ventilation ports may result in fire or electrical shock. If anything gets inside, immediately disconnect the power cord and contact your authorized Roland DG Corp. dealer.


WARNING


 Never place any flammable object nearby. Never use a combustible aerosol spray nearby. Never use in any location where gases can accumulate. Combustion or explosion could occur.


 Handle the power cord, plug, and electrical outlet correctly and with care. Never use any article that is damaged. Using a damaged article may result in fire or electrical shock.


 When using an extension cord or power strip, use one that adequately satisfies the machine's ratings (for voltage, frequency, and current). Use of multiple electrical loads on a single electrical outlet or of a lengthy extension cord may cause fire.

 Do not use with any power supply other than the dedicated AC adapter. Use with any other power supply may lead to fire or electrocution.

 Position so that the power plug is within immediate reach at all times. This is to enable quick disconnection of the power plug in the event of an emergency. Install the machine next to an electrical outlet. Also, provide enough empty space to allow immediate access to the electrical outlet.

 If sparking, smoke, burning odor, unusual sound, or abnormal operation occurs, immediately unplug the power cord. Never use if any component is damaged. Continuing to use the machine may result in fire, electrical shock, or injury. Contact your authorized Roland DG Corp. dealer.

 Never use cutting oil. This machine is not designed for the flow of cutting oil. Oil may get inside the machine and cause fire or electrical shock.

 Never use a pneumatic blower. This machine is not compatible with a pneumatic blower. Cutting waste may get inside the machine and cause fire or electrical shock.



1000008885

R1-110803

<http://www.rolanddg.com/>

Copyright © 2011 Roland DG Corporation